



WEB: www.yorkville.com

WORLD HEADQUARTERS

CANADA

Yorkville Sound Limited

550 Granite Court
Pickering, Ontario
L1W 3Y8 CANADA

Voice: 905-837-8481
Fax: 905-837-8746

U.S.A.

Yorkville Sound Inc.

4625 Witmer Industrial Estate
Niagara Falls, New York
14305, USA


Voice: 716-297-2920
Fax: 716-297-3689

Quality and Innovation Since 1963
Printed in Canada



SERVICE MANUAL

Acoustic Master Studio

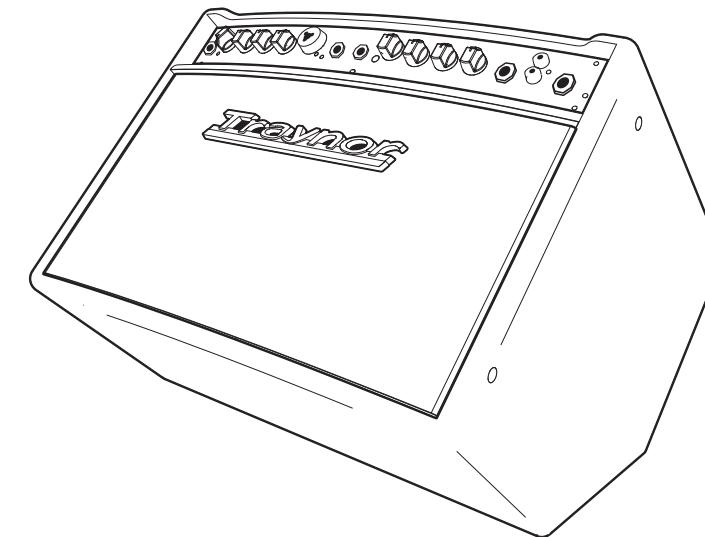

SMT Disclaimer

Due to the complex nature of the use of SMT installed components in Yorkville equipment, we highly caution all service technicians in attempting to repair or replace SMT factory installed components.

Many of these components may be glued prior to initial soldering.

Replacing SMT components requires expensive specialized de-soldering equipment and training.

Yorkville Sound will repair and replace defective SMT components to ensure proper quality assurance and installation is maintained.

IMPORTANT SAFETY INSTRUCTIONS



This lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Ce symbole d'éclair avec tête de flèche dans un triangle équilatéral est prévu pour alerter l'utilisateur de la présence d'un «voltage dangereux» non-isolé à proximité de l'enceinte du produit qui pourrait être d'ampleur suffisante pour présenter un risque de choc électrique.



CAUTION • AVIS
RISK OF ELECTRIC SHOCK
DO NOT OPEN
RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIR

CAUTION: HOT SURFACE
ATTENTION: SURFACE CHAUDE



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FOLLOW ALL INSTRUCTIONS

Instructions pertaining to a risk of fire, electric shock, or injury to a person

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
THIS DEVICE IS FOR INDOOR USE ONLY!**

Read Instructions: The Owner's Manual should be read and understood before operation of your unit. Please, save these instructions for future reference and heed all warnings.

Clean only with dry cloth.

Packaging: Keep the box and packaging materials, in case the unit needs to be returned for service.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. *Do not use this apparatus near water!*

Warning: When using electric products, basic precautions should always be followed, including the following:

Power Sources

Your unit should be connected to a power source only of the voltage specified in the owners manual or as marked on the unit. This unit has a polarized plug. Do not use with an extension cord or receptacle unless the plug can be fully inserted. Precautions should be taken so that the grounding scheme on the unit is not defeated. An apparatus with CLASS I construction shall be connected to a Mains socket outlet with a protective earthing ground. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Hazards

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious personal injury and/or serious damage to the product. Use only with cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. Only use attachments/accessories specified by the manufacturer. Note: Prolonged use of headphones at a high volume may cause health damage on your ears.

The apparatus should not be exposed to dripping or splashing water; no objects filled with liquids should be placed on the apparatus.

Terminals marked with the "lightning bolt" are hazardous live; the external wiring connected to these terminals require installation by an instructed person or the use of ready made leads or cords.

Ensure that proper ventilation is provided around the appliance. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. The AC supply cord should be routed so that it is unlikely that it will be damaged. Protect the power cord from being walked on or pinched particularly at plugs. If the AC supply cord is damaged DO NOT OPERATE THE UNIT. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle. The mains plug of the power supply cord shall remain readily operable.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Service

The unit should be serviced only by qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

IMPORTANT SAFETY INSTRUCTIONS (UL60065)



The Lightning Flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product



Le symbole représentant un éclair avec une flèche à l'intérieur d'un triangle équilatéral est utilisé pour prévenir l'utilisateur de la présence d'une tension électrique dangereuse non isolée à l'intérieur de l'appareil. Cette tension est d'un niveau suffisamment élevé pour représenter un risque d'électrocution



Le symbole représentant un point d'exclamation à l'intérieur d'un triangle équilatéral, signale à l'utilisateur la présence d'instructions importantes relatives au fonctionnement et à l'entretien de l'appareil dans cette notice d'installation

1. Read these instructions.

2. Keep these instructions.

3. Heed all warnings.

4. Follow all instructions.

5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING:

• To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

• To completely disconnect this apparatus from the ac mains, disconnect the power supply cord plug from the ac receptacle.

• The mains plug of the power supply cord or appliance coupler shall remain readily accessible.

1. Lisez ces instructions.

2. Conservez ces instructions.

3. Respectez tous les avertissements.

4. Suivez toutes les instructions.

5. N'utilisez pas l'appareil près de l'eau.

6. Nettoyez uniquement avec chiffon sec.

7. Ne bloquez pas les ouvertures de ventilation. Installer en suivant les instructions du fabricant.

8. Ne pas installer près des sources de chaleur telles que radiateurs, bouches de chaleur, four ou autres appareils (y compris les amplificateurs) produisant de la chaleur.

9. N'annulez pas l'objectif sécuritaire de la fiche polarisée ou de la tige de mise à la terre. Une fiche polarisée possède deux lames avec une plus grande que l'autre. Une prise avec mise à la terre possède deux lames et une troisième tige. La lame large ou la troisième tige sont fournies pour votre sécurité. Si la fiche n'entre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.

10. Protéger le cordon d'alimentation des piétinements ou pincements en particulier près des fiches, des prises de courant et au point de sortie de l'appareil.

11. Utilisez uniquement les accessoires spécifiés par le fabricant.

12. Utiliser uniquement avec un chariot, stand, trépied ou une table spécifiée par le fabricant, ou vendus avec l'appareil.

13. Débranchez l'appareil durant un orage ou lorsqu'il reste inutilisé pendant de longues périodes de temps.

14. Confiez toute réparation à un technicien qualifié. Une réparation est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce soit; comme lorsque le cordon d'alimentation ou la fiche est endommagé, lorsque le liquide a été renversé ou des objets sont tombés à l'intérieur, lorsque l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou est tombé.

AVERTISSEMENT:

• Pour réduire les risques d'incendie ou de choc électrique, ne pas exposer cet appareil à la pluie ou à l'humidité et ne placez pas d'objets contenant des liquides, tels que des vases, sur l'appareil.

• Pour isoler totalement cet appareil de l'alimentation secteur, débranchez totalement son cordon d'alimentation du réceptacle CA.

• La prise du cordon d'alimentation ou du prolongateur, si vous en utilisez un comme dispositif de débranchement, doit rester facilement accessible.



CAUTION

TO PREVENT ELECTRIC SHOCK HAZARD,
DO NOT CONNECT TO MAINS POWER SUPPLY
WHILE GRILLE IS REMOVED.



AVIS

POUR PRÉVENIR LES RISQUES D'ÉLECTROCUSSION,
NE PAS RACCORDER À L'ALIMENTATION ÉLECTRIQUE ALORS
QUE LA GRILLE EST RETIRÉE.



STUDIO
A COUSTIC MASTER
 QUALITY & INNOVATION ESTABLISHED 1963



The Acoustic Master Studio

The Traynor Acoustic Master Studio guitar amplifier was designed to reproduce sound from an acoustic guitar as naturally as possible.

1. **Power** - The power switch is located on the rear, the Blue LED will illuminate when the unit is turned on.
2. **Channel 1** - voiced specifically for acoustic guitars. It can accept either passive or active pick-ups (coil/piezo).
3. **Gain (Ch 1)** - Used to set input level, the clip LED gauges the level to help avoid clipping. If clipping occurs, adjust the volume on your guitar and/or adjust the Gain.
4. **Tone Controls (Ch 1)** - These controls help shape your tone and DO NOT affect Ch 2.
5. **Notch Filter** - The sweepable notch filter can help eliminate feedback caused by the guitar.
6. **Channel 2** - The Combi-Jack accepts line level signals from active acoustic guitars (or other line level sources) via the 1/4-inch portion and can also accept microphones through the balanced XLR.
7. **Gain (Ch 2)** - Set input level for Ch 2, works similarly to the Ch 1 Gain control.
8. **Tone Controls (Ch 2)** - A two band EQ (Bass and Treble) boosts or cuts the signal to shape your tone.

9. Master Effects - The Acoustic Master Studio uses a DSP (Digital Signal Processor) for its 16 custom effects. The Mix knob is used to blend in the required amount of the original, clean signal. The Modify control is used to alter the chosen effect. The parameter that can be changed is listed for each effect on the plate found on the top of your amp. Refer to the Owner's Manual for a description of each effect.

10. Master - The master volume is used to increase or decrease the overall output volume.

11. Footswitch - An optional footswitch, such as the single-switch APEX AFS1, can be used to bypass the built in effects.

12. Aux In - The stereo RCA are used with line level devices like MP3 players, CD players, etc. The signal is inserted before the Master volume.

13. Line Out - The balanced Line Out jack outputs a summed signal of ch 1 and 2, post-effects, pre Master Volume. The Gain controls do affect the output of the Line Out with the effects being audible but the Master control will not attenuate the signal. The Line Out can be connected directly to a mixer, a recording device or even another amplifier.

Traynor

To get the full Owner's Manual please visit our website at
<http://www.yorkville.com/manuals/> or, if you need a printed version call 905-837-8777

**REAL Gear.
REAL People.**



Canada
 Voice: (905) 837-8481
 Fax: (905) 837-8746

U.S.A.
 Voice: (716) 297-2920
 Fax: (716) 297-3689

www.yorkville.com

Yorkville Sound
 550 Granite Court
 Pickering, Ontario
 L1W-3Y8 CANADA

Yorkville Sound Inc.
 4625 Witmer Industrial Estate
 Niagara Falls, New York
 14305 USA

STUDIO
A COUSTIC MASTER
 QUALITY & INNOVATION ESTABLISHED 1963



L'Acoustic Master Studio

L'amplificateur de guitare Traynor Acoustic Master Studio a été conçu pour reproduire le son naturel de votre guitare

1. Alimentation - L'interrupteur d'alimentation est situé à l'arrière, le voyant bleu s'allume lorsque l'appareil est sous tension.

2. Canal 1 - spécialement conçu pour les guitares acoustiques. Il peut accepter des micros passifs ou actifs (bobine/piezo).

3. Gain (Canal 1) - Utilisé pour régler le niveau d'entrée, la DEL d'écrêtage indique le niveau pour aider à éviter l'écrêtage. En cas d'écrêtage, réglez le volume de votre guitare et/ou ajustez le gain.

4. Commandes de Tonalité (Canal 1) - Ces commandes permettent de sculpter votre sonorité et n'affectent PAS le canal 2.

5. Filtre coupe-bande - Le filtre coupe-bande balayable peut aider à éliminer le larsen causé par la guitare.

6. Canal 2 - La prise combinée accepte les signaux de niveau de ligne des guitares acoustiques actives (ou d'autres sources de niveau ligne) via la partie 1/4 de pouce et peut également accepter les microphones via la XLR symétrique.

7. Gain (Canal 2) - Règle le niveau d'entrée pour le canal 2, fonctionne comme la commande de gain du canal 1.

8. Commandes de Tonalité (Canal 2) - Un égaliseur à deux bandes (basses et aigus) augmente ou réduit le niveau du signal pour sculpter votre son.

9. Effets Numériques - L'Acoustic Master Studio utilise un DSP (processeur de signal numérique) pour ses 16 effets personnalisés. Le bouton Mix est utilisé pour mélanger la quantité requise du signal original. La commande Modify est utilisée pour modifier l'effet choisi. Le paramètre qui peut être modifié est indiqué pour chaque effet sur la plaque située sur le dessus de votre ampli. Consultez le manuel d'utilisation pour obtenir une description de chaque effet.

10. Master – La commande de volume Master est utilisé pour augmenter ou diminuer le volume de sortie global.

11. Commutateur au Pied - Un commutateur au pied optionnel, comme le APEX AFS1 équipé d'un seul commutateur, peut être utilisé pour contourner les effets intégrés.

12. Entrée Aux - Les prises RCA stéréo sont utilisées avec des appareils à niveau de ligne comme les lecteurs MP3, les lecteurs de CD, etc. Le signal est inséré avant le volume principal.

13. Sortie Ligne - La prise de sortie ligne (Line Out) symétrique fournit un signal additionné des canaux 1 et 2 capté après les effets mais avant le d'atteindre la commande Master Volume. Les commandes de gain affectent le signal à la sortie ligne, les effets étant audibles, mais la commande Master n'atténue pas le signal. La sortie ligne peut être connectée directement à une table de mixage, un appareil d'enregistrement ou même un autre amplificateur.

Traynor

Pour obtenir le manuel de utilisateur visitez notre site Web à <http://www.yorkville.com/manuals/> ou, si vous avez besoin d'une version imprimée appelez-nous au 905-837-8777

**REAL Gear.
REAL People.**



Canada
 Voice: (905) 837-8481
 Fax: (905) 837-8746

U.S.A.
 Voice: (716) 297-2920
 Fax: (716) 297-3689

www.yorkville.com

Yorkville Sound
 550 Granite Court
 Pickering, Ontario
 L1W-3Y8 CANADA

Yorkville Sound Inc.
 4625 Witmer Industrial Estate
 Niagara Falls, New York
 14305 USA




<i>Specifications</i>	
Power @ min. impedance (Watts)	65
Minimum Impedance (ohms)	4
Burst Power - 2 cycle	100
Speaker Configuration - LF (Size / Power)	8 inch / 100 Watts
Speaker Configuration - HF (Size / Power)	1 inch / 50 Watt dome tweeter
Input Channels	2
Channel 1 - inputs	1/4 inch Unbalanced
Channel 1 - controls	Gain, Bass, Treble, Notch Filter Frequency
Channel 2 - inputs	Combi Jack (PBM, XLR)
Channel 2 - controls	Gain, Tone
Channel 2 - switches	Ch2 EFX defeat
Input Sensitivity (mV)	ch 1=100, ch 2 TRS=100, ch 2 XLR=15
Line Out (type / configuration)	1/4 inch TRS
Line Out Sensitivity (Vrms)	1
Master Volume	Yes
Effects Mix control	Yes
Effects Loop / Location	No
Internal Reverb / Effects ch1/ch2	16 modifiable digital effects
EFX foot switch	Yes
Aux input	RCA
LED Indicators	Power, Clip
Dimensions (DWH, inches)	14 x 12 x 17
Dimensions (DWH, cm)	36 x 30 x 43
Weight (lbs / kg)	23.5 / 10.7

Block Diagram for Acoustic Master Studio


DESIGNED AND MANUFACTURED BY YORKVILLE SOUND


Channel Inputs

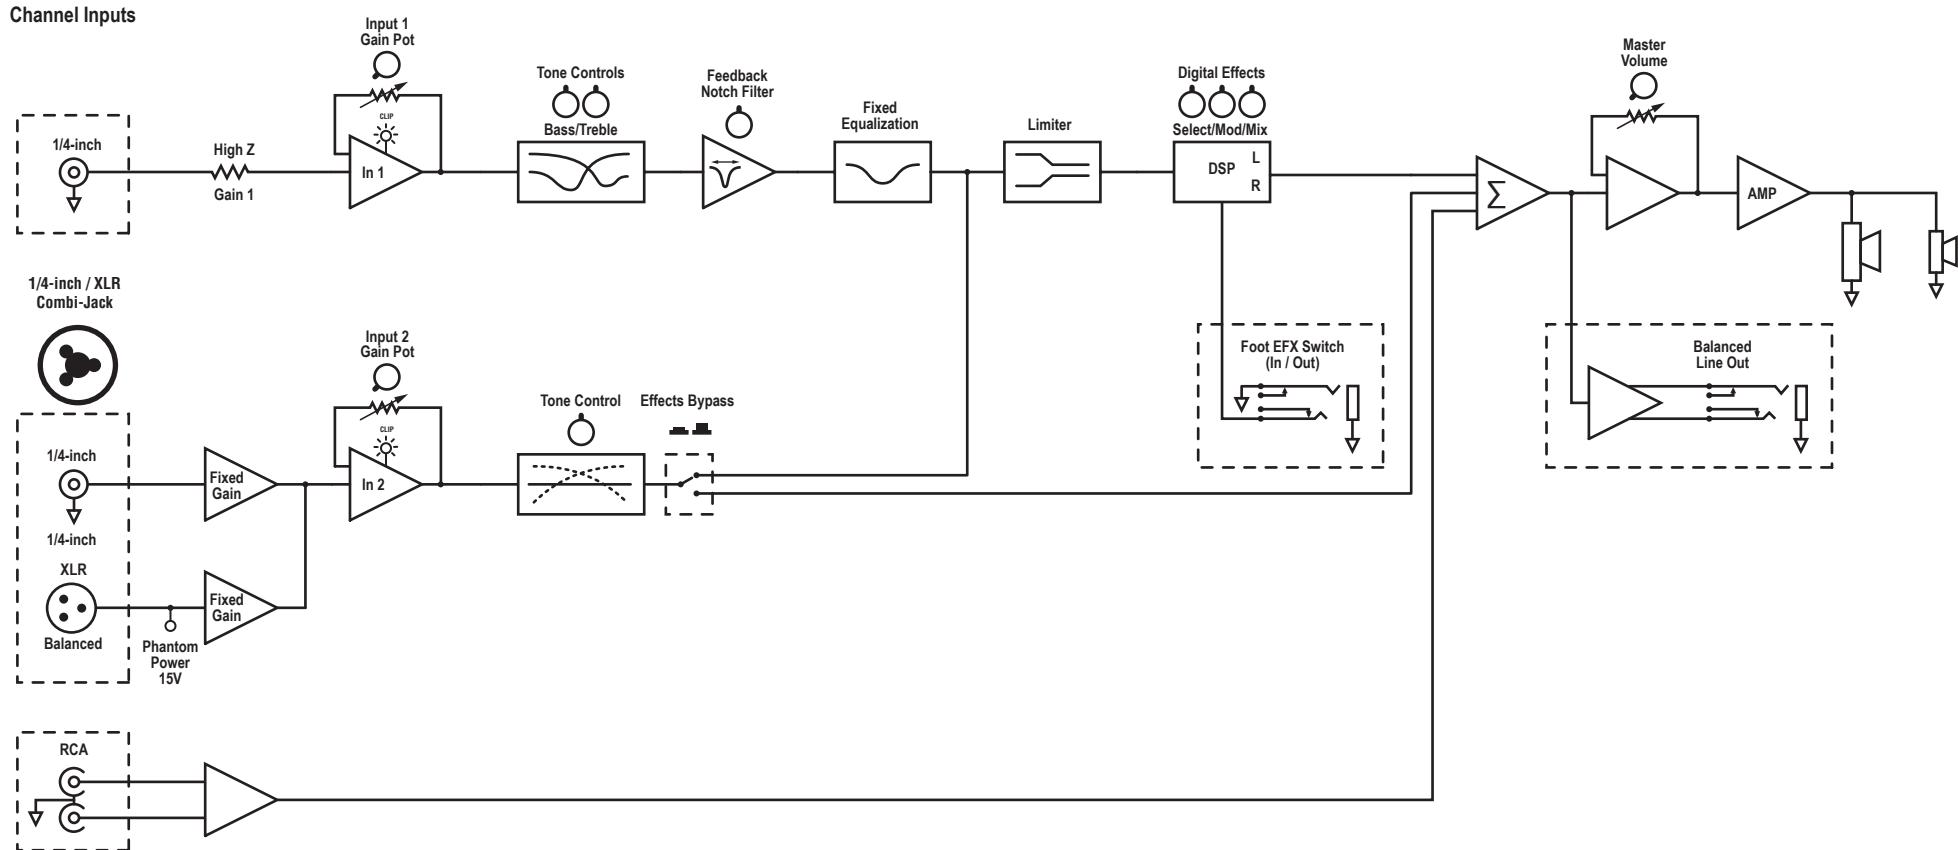



AMSTUDIO Parts List 7/17/2018

YS #	Description	Qty.	YS #	Description	Qty.	YS #	Description	Qty.
5402	_15P 100V 10%CAP T&R BEAD NPO	2	4852	W250 100R 5% T&R RES	4			
5408	47P 100V 10%CAP T&R BEAD NPO	1	4897	W250 120R 5% T&R RES	1			
5410	100P 100V 10%CAP T&R BEAD NPO	4	4770	W250 249R 1% T&R RES	2			
5412	220P 100V 10%CAP T&R BEAD NPO	2	4872	W250 390R 5% T&R RES	1			
5420	680P 50V 10%CAP T&R BEAD NPO	2	4821	W250 470R 5% T&R RES	1			
5206	_1N 400V 5%CAP T&R RAD .2FLM	3	2028	W167 475R 1%FLAME PROOF T&R RES	2			
5208	2N2 400V 5%CAP T&R RAD .2FLM	2	4871	W250 560R 5% T&R RES	1			
6451	4N7 250V 20%CAP BLK 'Y' 10MM AC	1	4891	W250 620R 5% T&R RES	2			
5204	10N 100V 10%CAP T&R RAD .2FLM	1	6110	W250 1K0 1%MINI MF T&R RES	8			
5207	18N 100V 5%CAP T&R RAD .2FLM	1	4854	W250 1K2 5% T&R RES	2			
5210	22N 100V 10%CAP T&R RAD .2FLM	2	4824	W250 1K5 5% T&R RES	2			
6435	22N 275V 20%CAP BLK 'X'2' 15MM AC	1	4993	W250 1K87 1% T&R RES	3			
5223	_39N 100V 10%CAP T&R RAD .2FLM	3	4808	W250 2K 5% T&R RES	1			
5224	_47N 100V 10%CAP T&R RAD .2FLM	1	4847	W250 2K2 5% T&R RES	2			
5314	100N 50V 10%CAP T&R BEAD X7R	21	4804	W250 3K 5% T&R RES	4			
5229	150N 63V 10%CAP T&R RAD .2FLM	1	4827	W250 4K7 5% T&R RES	3			
5231	220N 63V 5%CAP T&R RAD .2FLM	1	4639	W250 4K99 1% T&R RES	20			
5233	330N 63V 5%CAP T&R RAD .2FLM	2	4893	W250 5K1 5% T&R RES	1			
5234	470N 63V 10%CAP T&R RAD .2FLM	2	4828	W250 6K8 5% T&R RES	1			
5240	680N 63V 10%CAP T&R RAD .2FLM	1	4863	W250 8K2 5% T&R RES	4			
5256	_1U 63V 5%CAP T&R RAD .2FLM	4	4800	W250 10K0 1% T&R RES	23			
5257	_2U2 63V 20%CAP T&R RAD .2EL	1	4856	W250 12K 5% T&R RES	2			
5259	_4U7 63V 20%CAP T&R RAD .2	4	4830	W250 15K 5% T&R RES	4			
5933	_4U7 100DC 10%CAP BLK RAD POLYE FLM	1	6123	W250 20K0 1%MINI MF T&R RES	2			
5945	10U 63V 20%CAP T&R RAD .2EL	5	4902	W250 24K 5% T&R RES	8			
5961	33U 16V 20%CAP T&R RAD .2IN NP	2	4834	W250 47K 5% T&R RES	1			
5267	100U 25V 20%CAP T&R RAD .2EL	4	4836	W250 68K 5% T&R RES	1			
5630	330U 25V 20%CAP BLK 10X13MM EL	2	4837	W250 82K 5% T&R RES	1			
5616	3300U 50V 20%CAP BLK 18X35MM EL	2	4838	W250 100K 5% T&R RES	7			
4523	ROT BIN HOR 20MM 4BIT ENCODER P31	1	4849	W250 180K 5% T&R RES	1			
4480	_10K 1B LIN 12MM HOR ST P39	5	4844	W250 1M 5% T&R RES	5			
4453	50K B LIN 12MM 4PIN HORZ DTP40	3	9010	16GA COLD ROLLED STEEL 4X8' SHEET	0.533			
4419	100K B LIN 12MM HORIZONTAL STP27	1	9150	.081" 48X96 UTILITY ALUMINUM	0.246			
5906	RED 3MM LED 1V9 20MA,4SPCR T&R	1	9982	4-40X5/16 SOCKET HEAD CAP SCREW	7			
6405	RED 3MM LED 2V1 20MA DIFFUSD	2	8742	4-40X3/8 PAN PH TAPITITE BO&W	3			
6554	BLUE 3MM LED 3V9 20MA	1	8829	6-32 X 3/8 FLAT PH TAPITITE TBZ	15			
6825	1N4148 75V 0A45 DIODE T&R	13	8784	#6X7/16 PAN QUAD FRAME BLACK	2			
6438	1N4007 1000V 1A0 DIODE T&R	9	8755	#6X5/8 PAN QUAD TYPE A JS500 B	4			
6827	1N5402 200V 3A0 DIODE	4	8828	6-32X3/4 PAN PHIL TAPITITE TBZ	3			
6463	1N5251BRL 22V0 0W5 ZENER 5% T&R	1	8767	#8X3/4 PAN QUAD TYPE A JS500	3			
6459	1N4732A 4V7 1W0 ZENER 5% T&R	1	8868	10-32X1/2 FLAT PH 82' UCUT TT TBZ	16			
6875	1N5359B 24V0 5W0 ZENER 5% T&R	2	8756	#10 X 3/4 PAN QUAD TYPE A TBZ	8			
6857	NJM7915FA TO220 N 15V REG IS V2	2	8781	#10X7/8 FLAT QUAD TYPE A TBZ	8			
6789	2N3904 TO92 NPN TRAN TA	3	8786	10-32X11/4 PAN QUAD MS TBZ	6			
5105	MPSA13 TO92 NPN DARL T&R TA	2	8770	1/4-20X1 5/16 PHIL TRUSS MS TBZ	3			
5106	MPSA63 TO92 PNP DARL BLK TA	1	8779	1/4-20X2X1/2 CARRIAGE BOLT ZINC	1			
5122	J109 TO92 NCH JFET T&R TC	1	7766	15P 50V 5%CAP 0603 SMT NPO	1			
6882	TL072CP IC FET DUAL OP AMP	6	7693	1N 50V 5%CAP 0805 SMT NPO	2			
6757	LM3886 IC 85 WATT POWER AMP	1	7966	2N7 100V 10%CAP 0805 SMT X7R	2			
6745	LM13600N IC XCONDUCTANCE AMP	1	5979	100N 50V 5%CAP 0805 SMT X7R	5			
3975	SNAP ON 0.718" INSULATING BUSHING	2	7769	_1U 50V 20%CAP 4.3X3.9 SMT ELC	5			
3785	150UH COIL 22AWG R000 BOBBIN	1	7810	47U 16V 20%CAP 6X5.4 SMT ELE	2			
8630	2.00 X 2.50 ROLLED EDGE PORT TUBE	15	7912	FV-1 SPIN SEMI REVERB SMT IC	1			
3601	RING TERMINAL 16AWG WIRE & #8 SCREW	18	7818	LM1117 REGULATOR 3V3 SMT SOT223	1			
3498	1/4" JCK PCB MT HORZ	3	7786	CD4052B DUAL 4CH MUX SMT IC	1			
3456	RCA DUAL PCB MT HORZ STACK W ON TOP	1	7938-PROG	24LC32A SER EEPROM AAM1-U3 YS DFX	1			
3450FW	WASHER FOR NEUTRIK PCB MOUNT JACKS	3	7939-PROG	24LC32A SER EEPROM AAM1-U4 YS DFXY	1			
3450NUT	NUT FOR NEUTRIK PCB MOUNT 1/4" JACK	3	7932	07 PIN 25SQ 100 PIN SIL SMT	1			
3845	1/4"&XL PCB MT HORZ COMBO NON-LOCK	1	7933	08 PIN 25SQ 100 PIN SIL SMT	1			
3414	INTERNATIONAL PC MOUNT FUSEHOLDER	2	7913	32KHZ CRYSTAL 4-PIN FSRLF SMT	1			
2449	_1.0 AMP SLO-BLO 25X1.25 FUSE	1	7882	W250 0R 1206 SMT RES	1			
8290	8.5"BROWN LEATHER HNDLR BLK MET LOOP	1	7781	W063 49R9 1% 0603 SMT RES	1			
7497	4 OHM 1" PEERLESS TWEETER	1	7853	W250 100R 5% 1206 SMT RES	2			
3909	XTR CLIP 1.2X0.5" TO220	1	7621	W100 1K0 1% 0805 SMT RES	4			
3810	4" NYLON CABLE TIE	6	7625	W100 10K0 1% 0805 SMT RES	5			
4147	6 PIN POWER PIN HEADER MALE POLZED	2	7634	W100 20K5 1% 0805 SMT RES	2			
4145	9PIN 3X3 POWER PIN HEADER	1	8656	1/4X171 NYLON SPACER	3			
8636	BUTTON 230X465 RND FLAT BLK (3425)	12	7498	.8" 4R 75WPGM SPEAKER	1			
3428	8' 3/18 SJT AC LINE CORL REMOVABLE	1	3501	#4 B52200F006 COMP WASH SMALL	2			
8288	TRAYNOR LOGO PLASTIC IVORY COLORED	1	3577	.625ODX.380IDX.03 FIBER WASHER	2			
9925	1/8" TINNERMAN PUSHNUT SIZE ROU	3	8817	#10 FLAT WASHER FOR 3/16 BOLT TBZ	10			
8800	6-32 KEPS NUT ZINC	6	3425	DPDT PUSH SW PCMT BREAK B4 MAKE	1			
8845	10-32 PEMNUT C-1032-2-Z1	1	3698	SPST ROKR SW QUIK 180° AC PWR BL/BL	1			
8895	10-32X5/32 CAGE NUT TBZ	4	3392	250 MALE TAB 2IN T&R	5			
8898	1/4-20 CAGE NUT	4	8468	VELCRO STRAP 3/4"X22CM (VELSTRAP)	1			
4170	SILPAD 1500ST 1.125 X1.425 BERQUIST	1	3950	GRN 18AWG TR64 PREFUSED WIRE	14.208			
4599	22AWG SOLID SC WIR T&R JMP	14	CH1409U	XFMR:AMSTUDIO	1			
4748	2W00 3R9 5% T&R RES	2	8387	PS NEO SC41 1/16" X 0.5" X 100' ROL	3.333			
4675	W500 10R 5% T&R RES	2						
4750	5W00 10R 5% BLK RES	1						

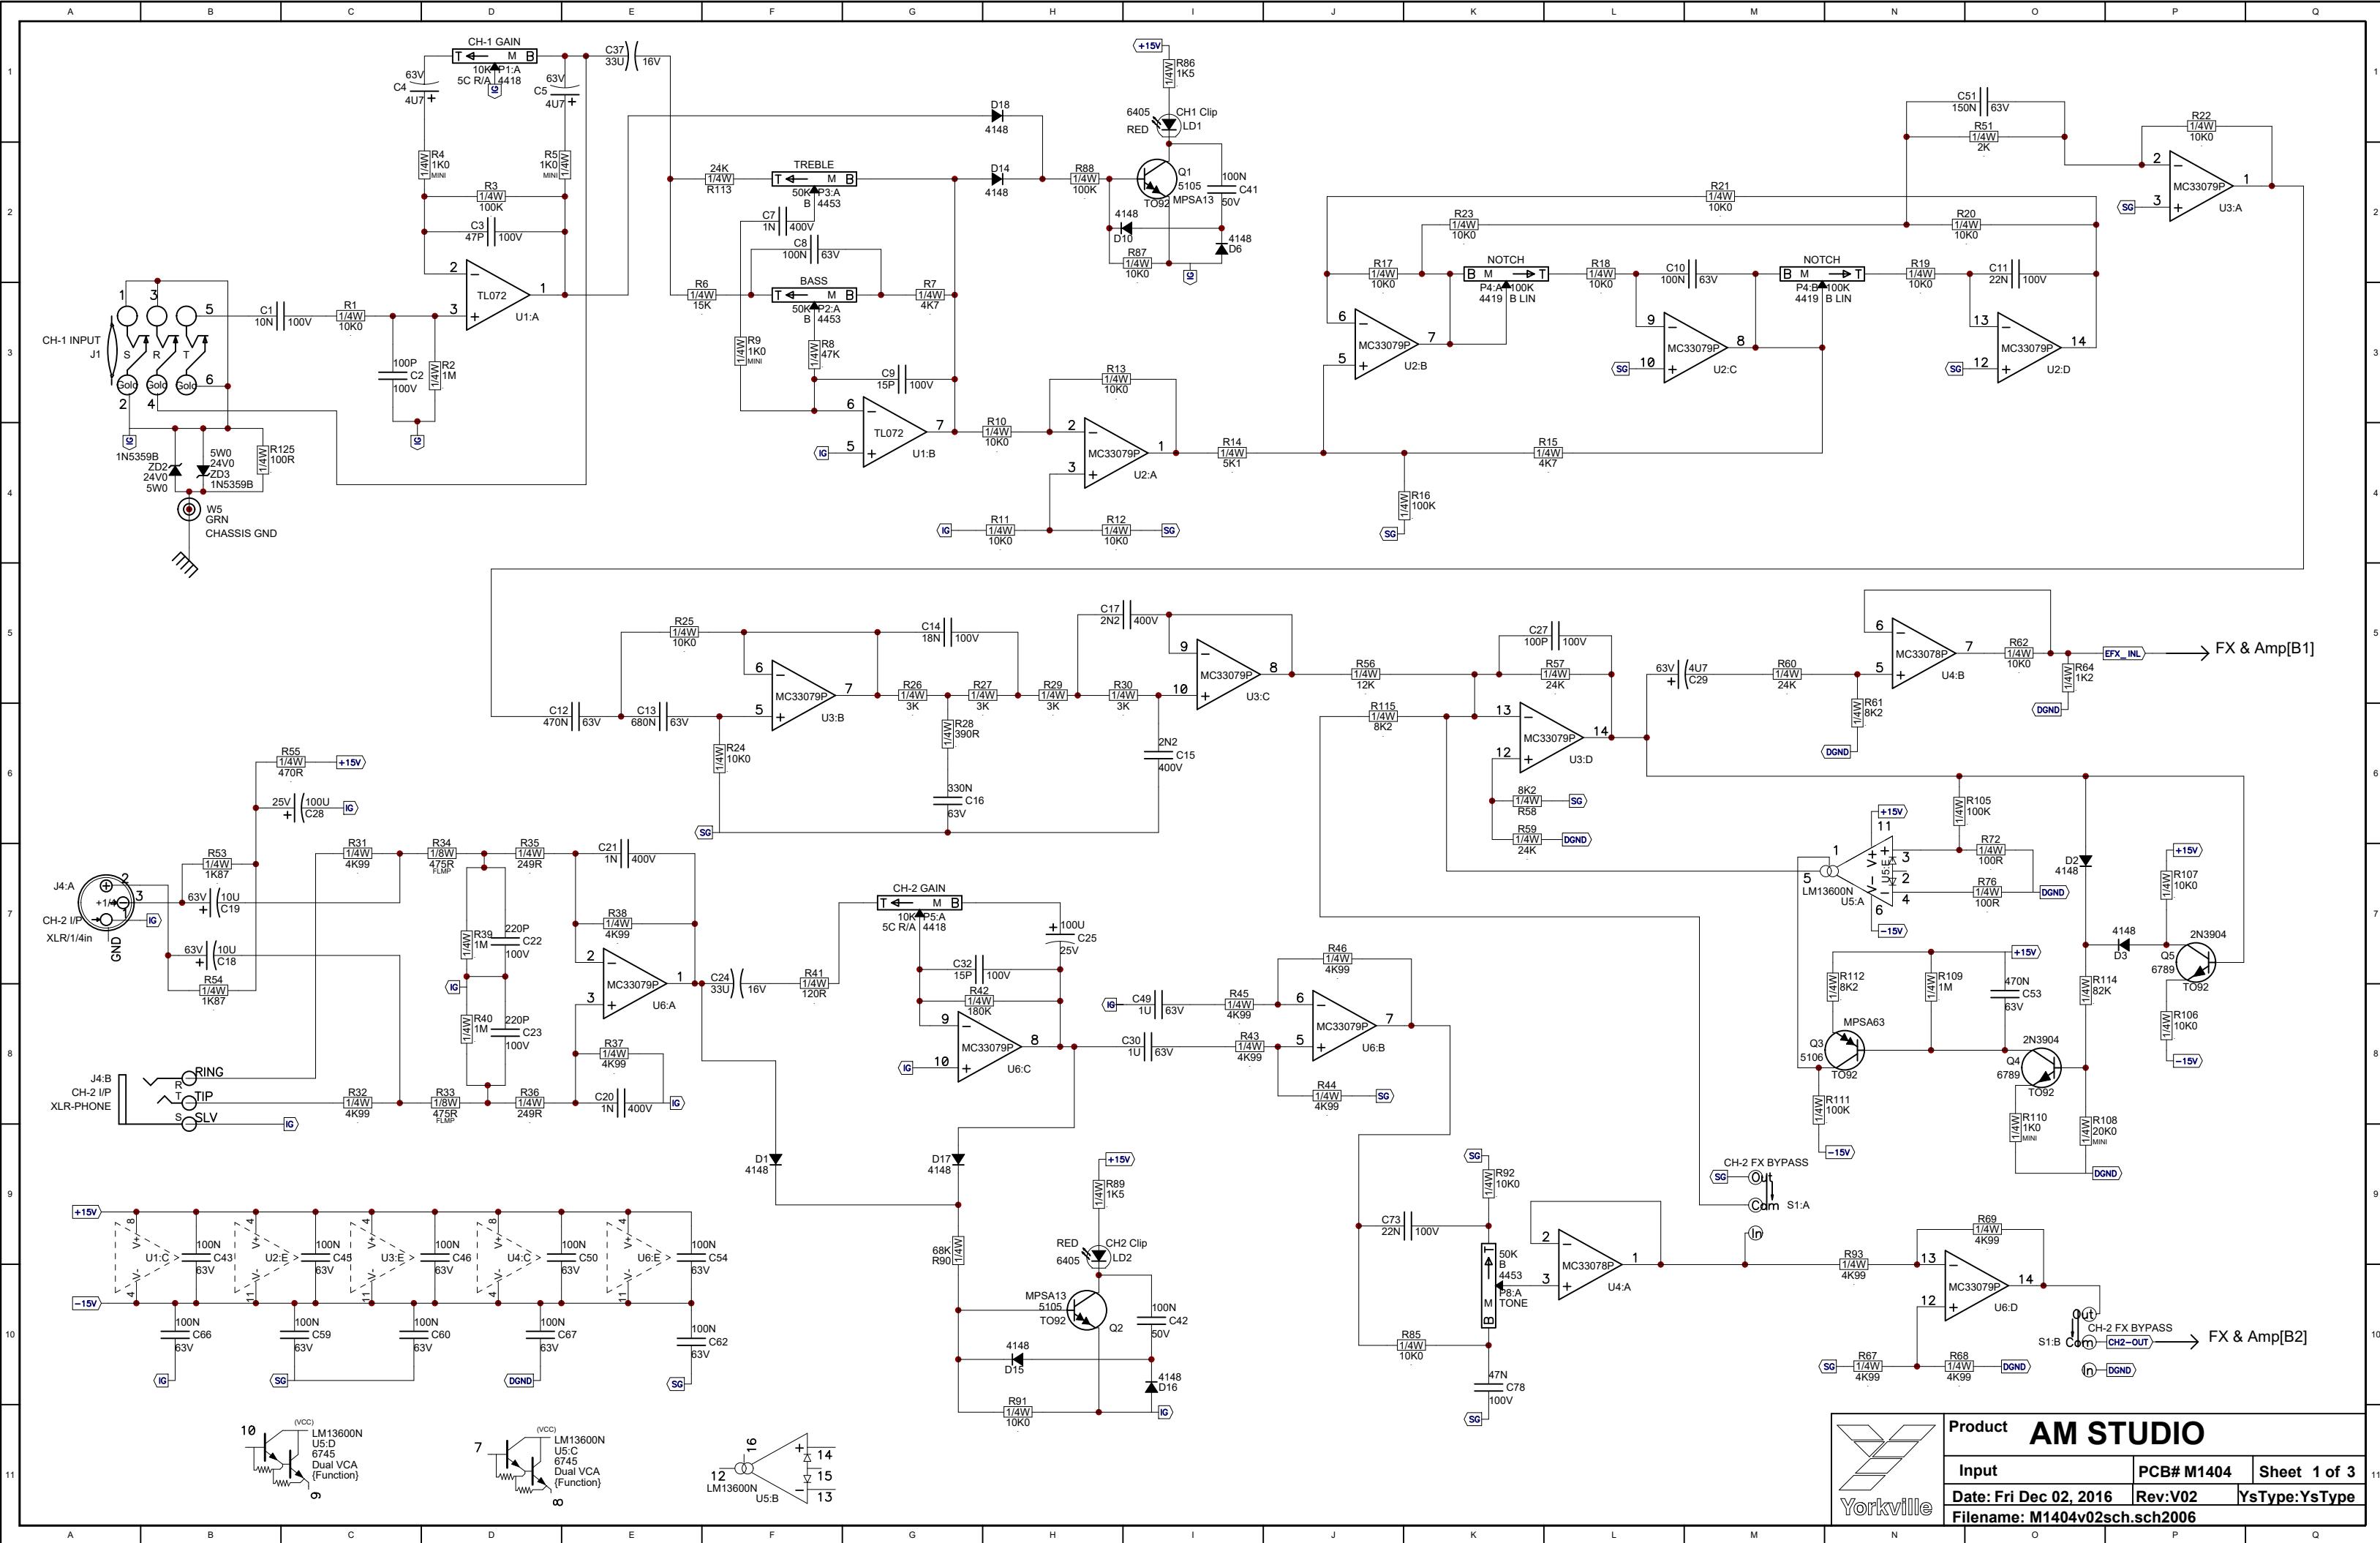

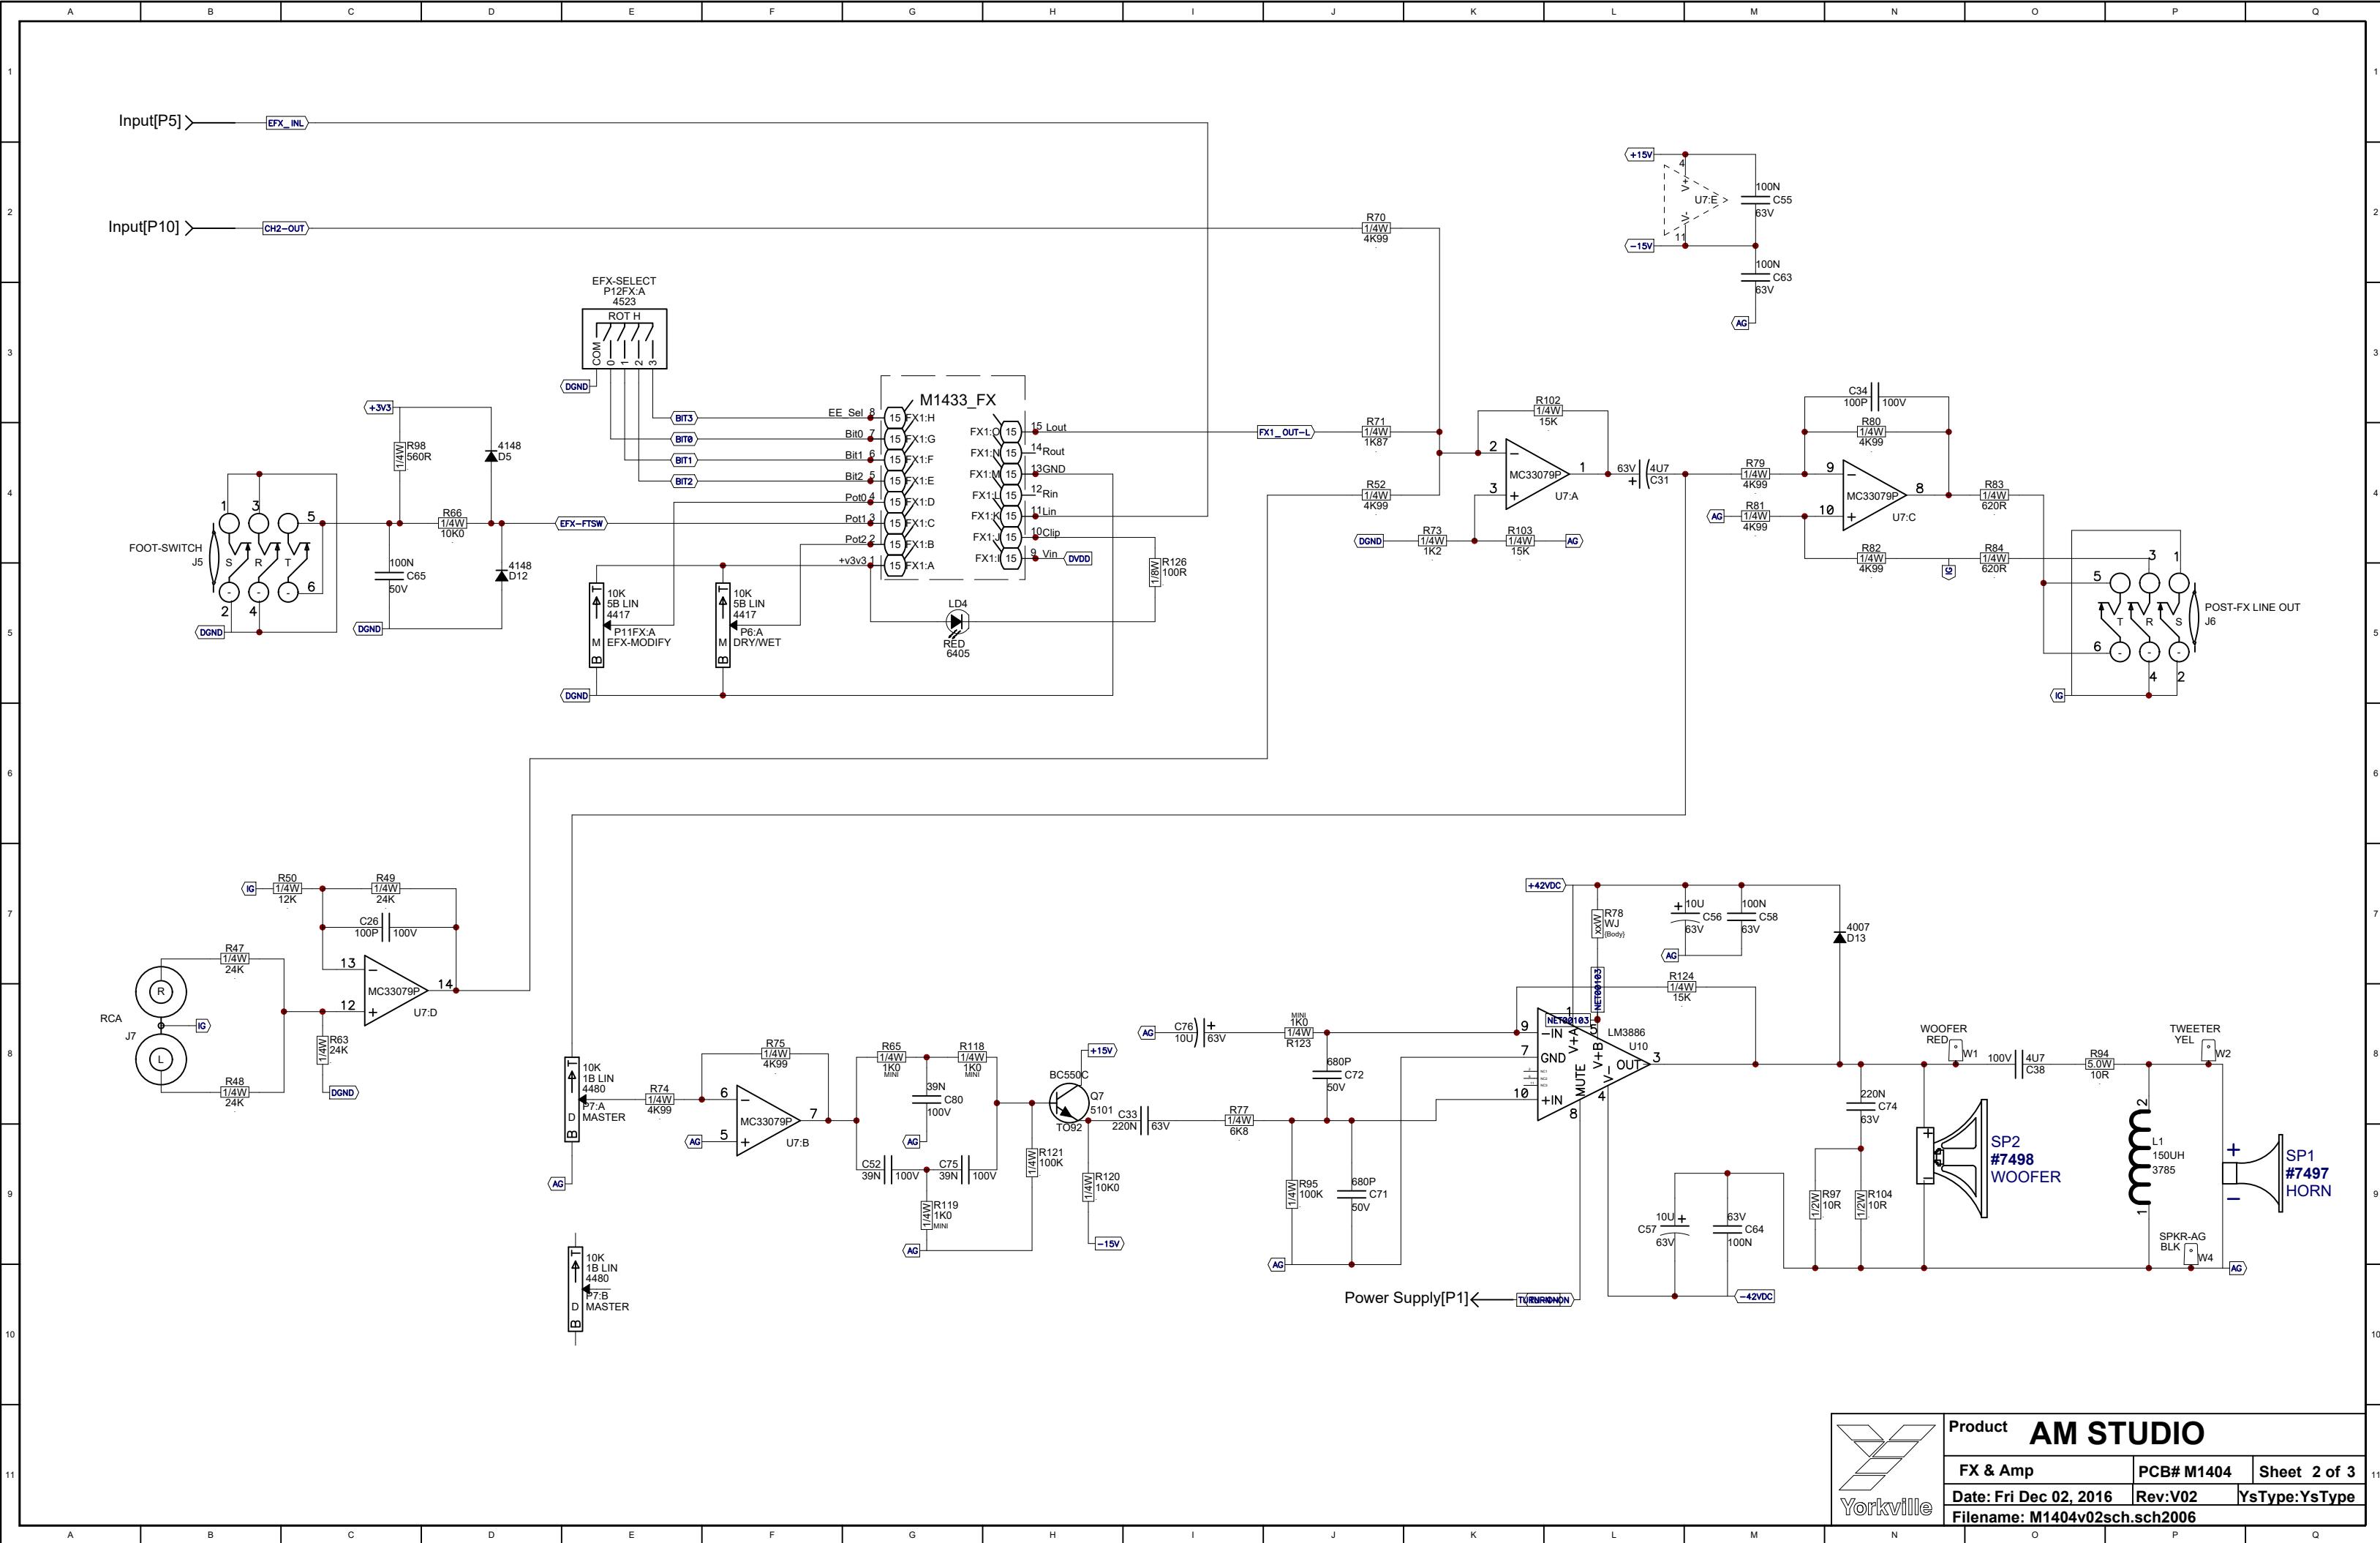

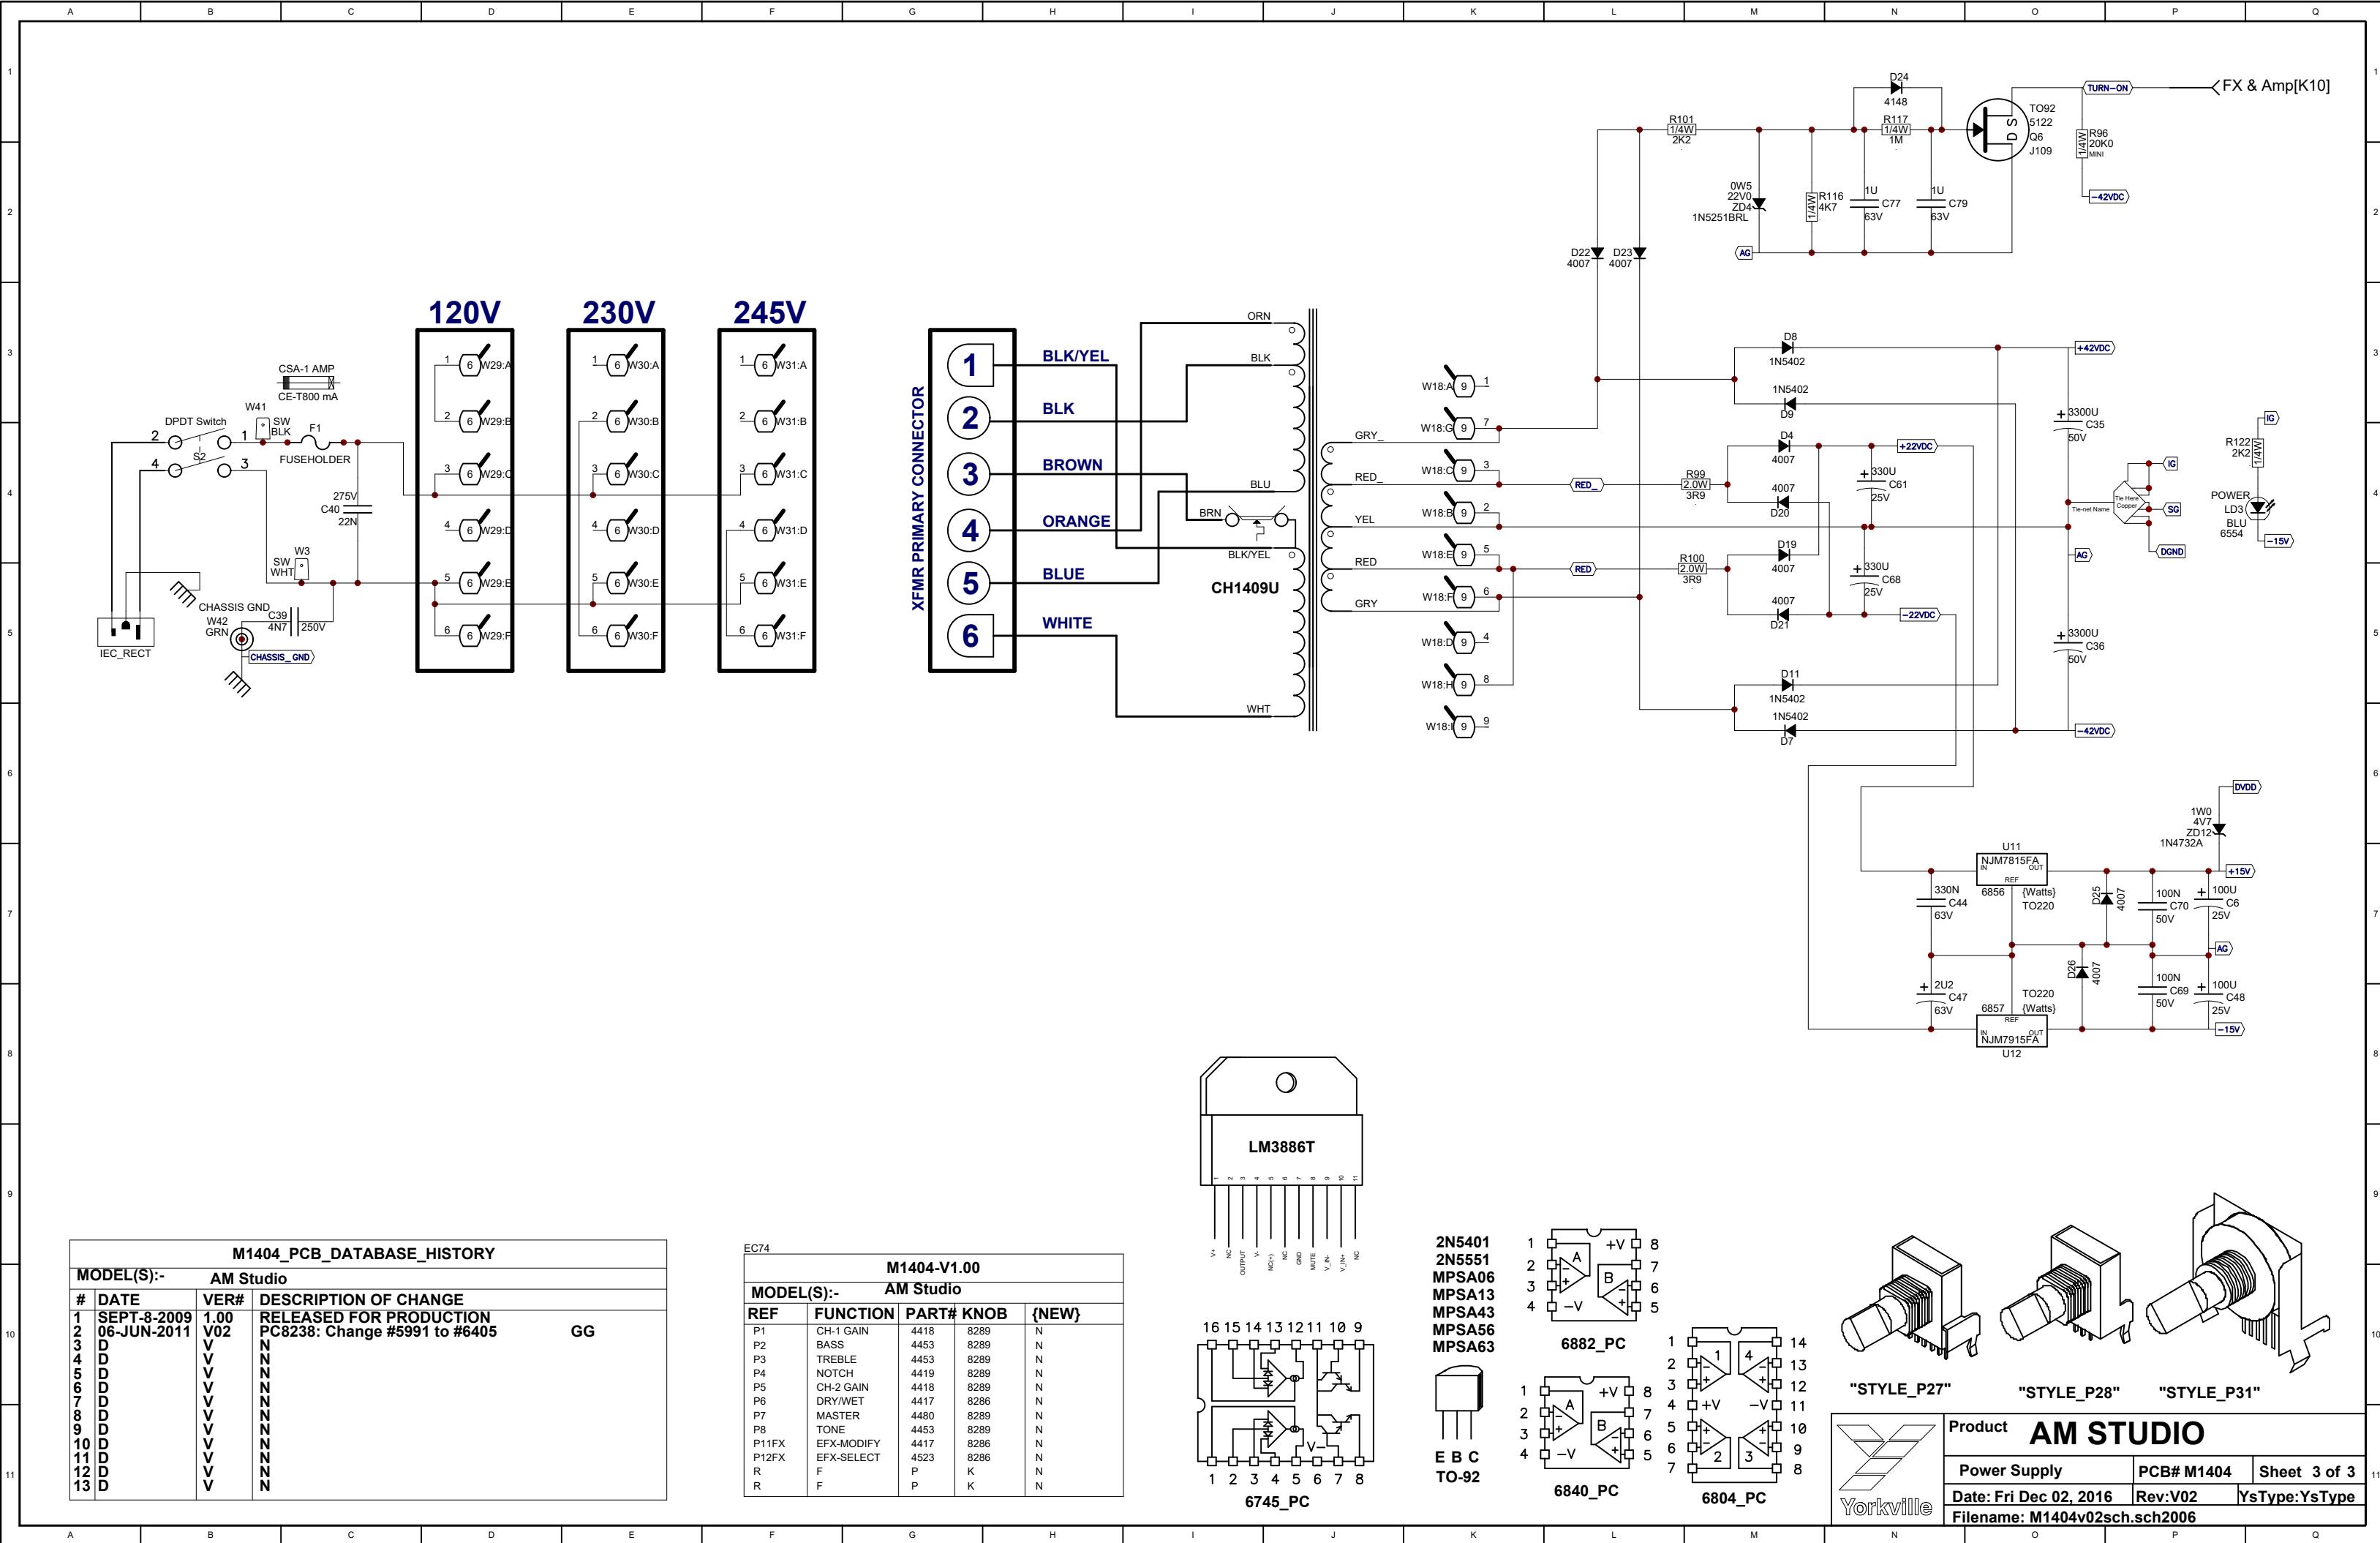

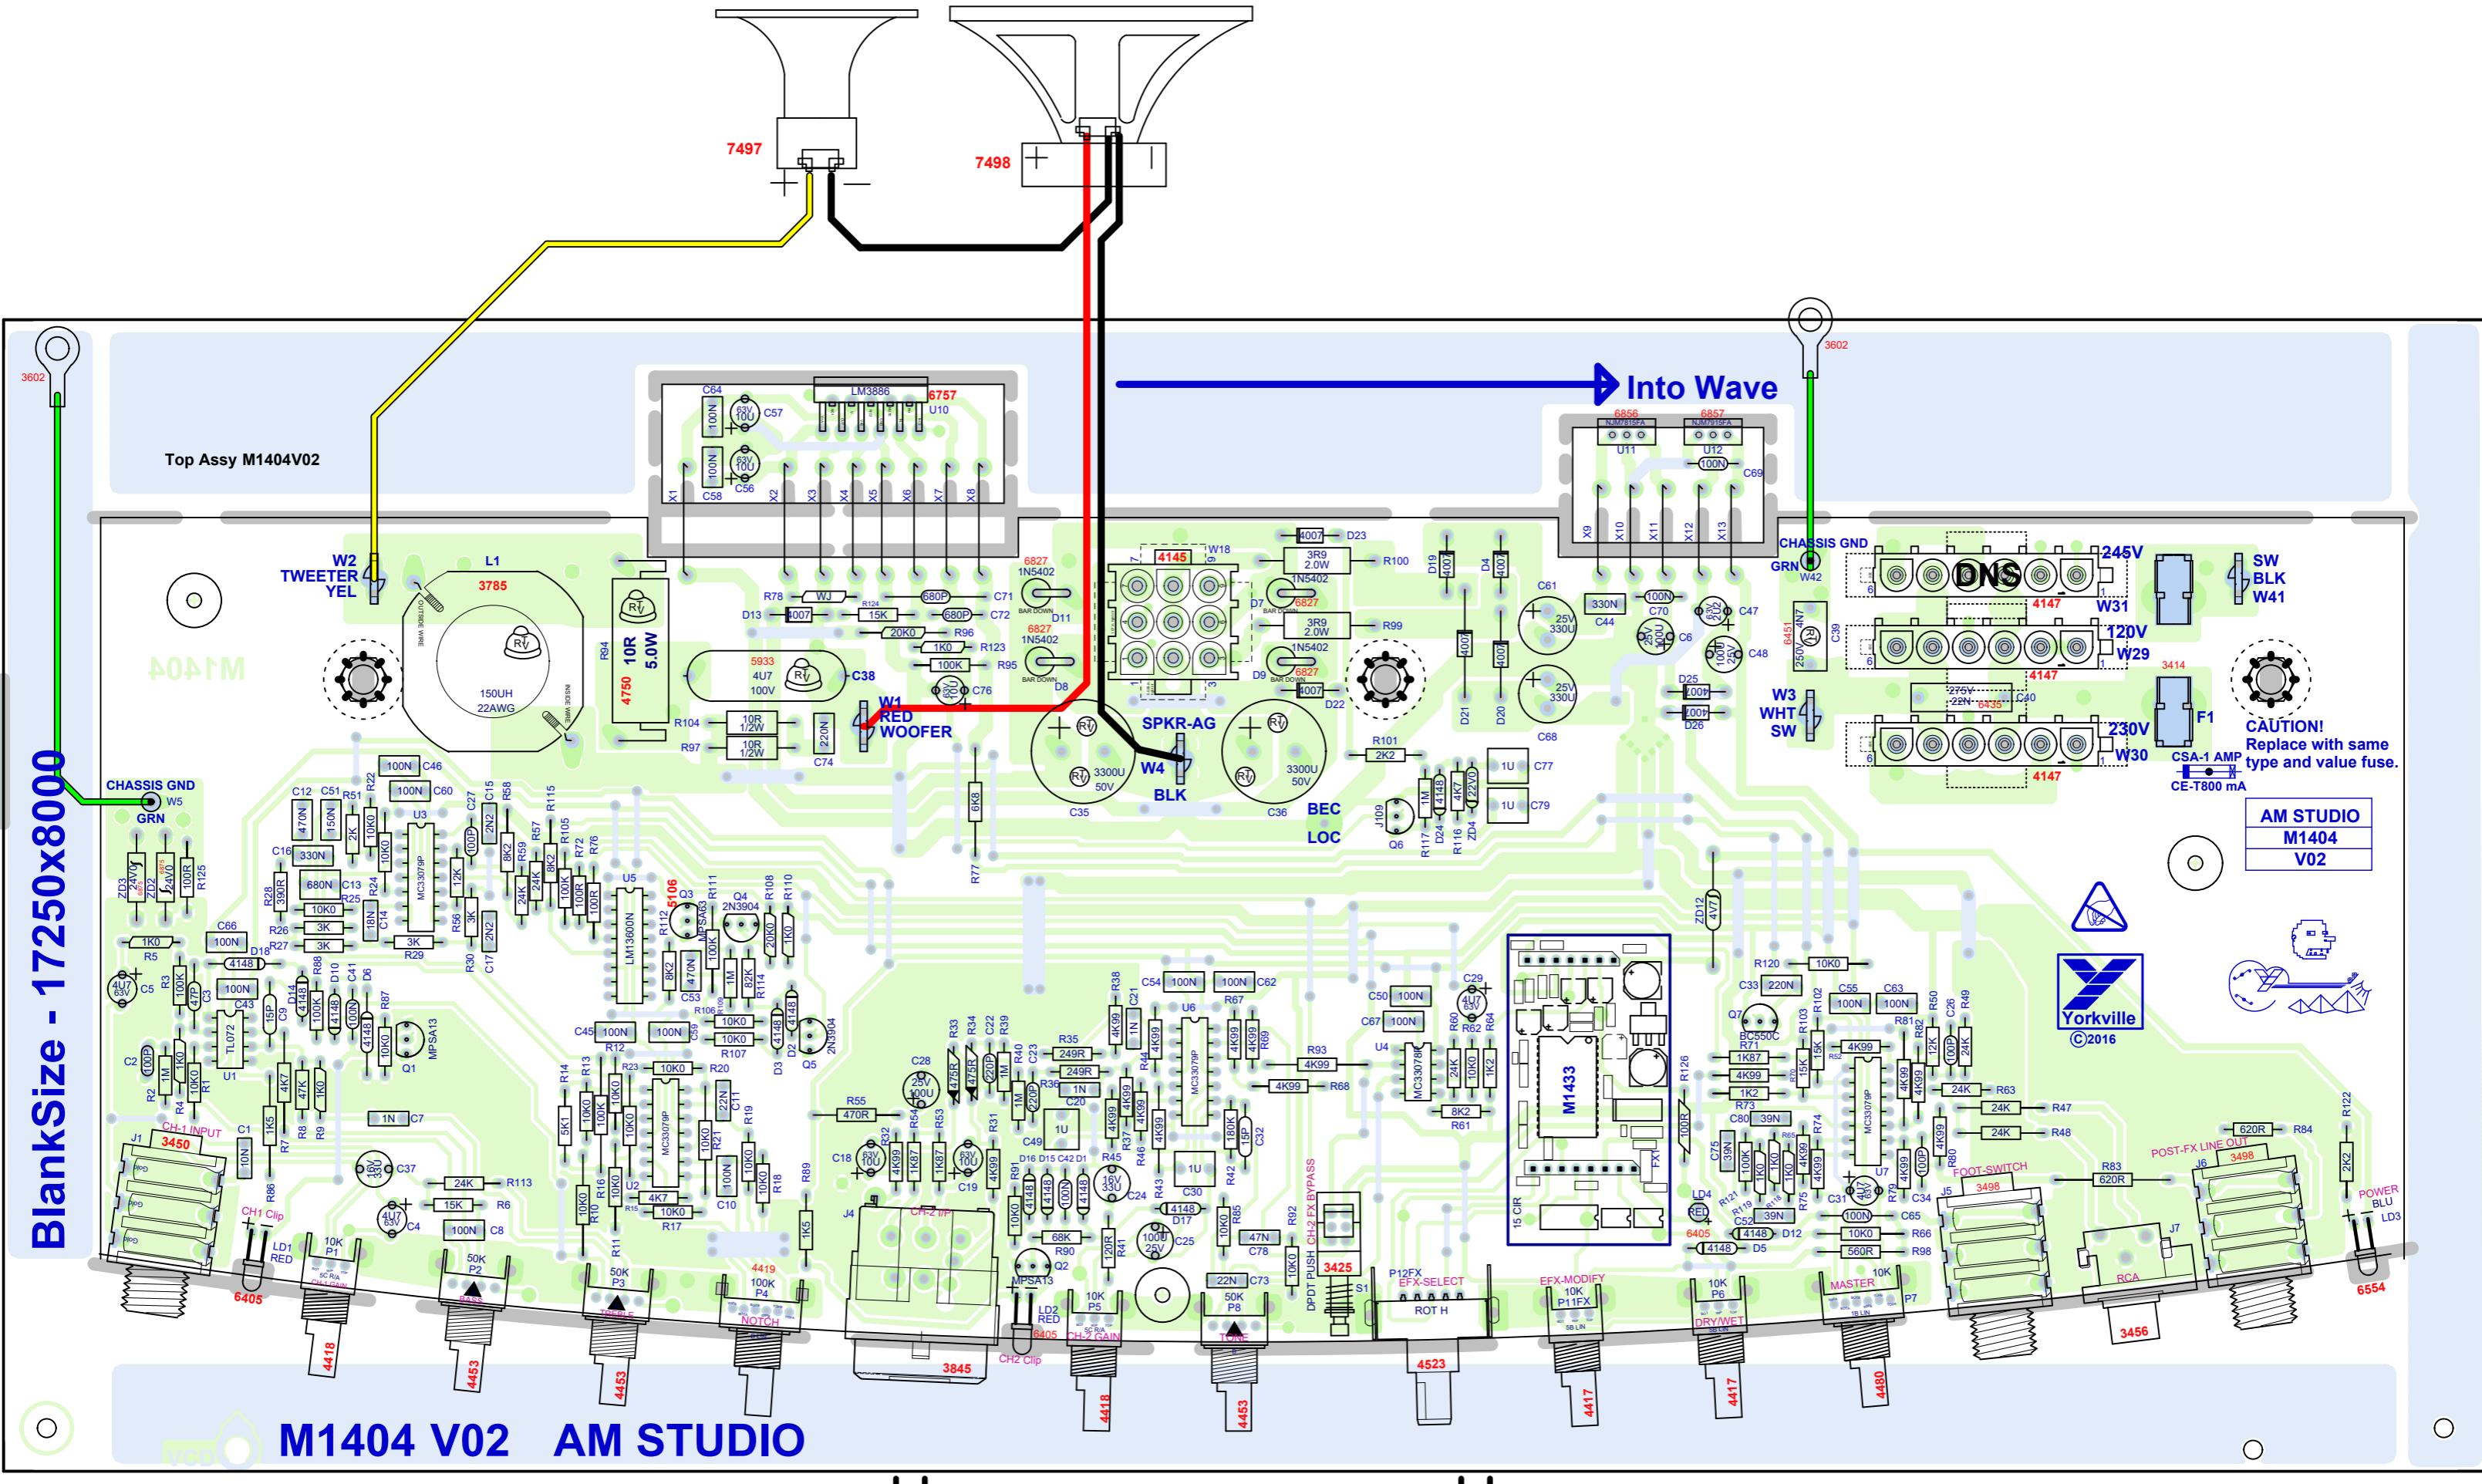

SEE LAYOUT DOCUMENTATION




SEE LAYOUT DIAGRAM




M1404 V02 PRODUCTION NOTES

1. RTV ALL ELECTROLITIC CAPS.
2. PCBSA: DO NOT BREAK OUT BOARD BEFORE TESTING.
3. PCBSA: DO NOT STUFF W31.
4. HAND PLACE Q3 YS# 5106.


SEE LAYOUT DIAGRAM

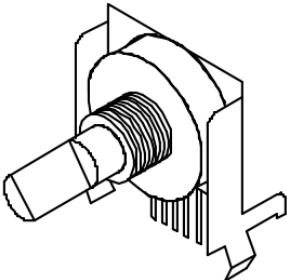


"STYLE_P31"

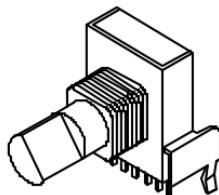

"STYLE_P27"

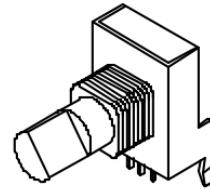

"STYLE_P28"

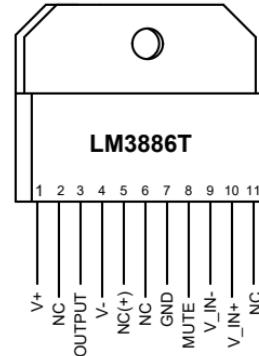

6757


M1404_PCB_DATABASE_HISTORY			
MODEL(S):- AM Studio			
#	DATE	VER#	DESCRIPTION OF CHANGE
1	SEPT-8-2009	1.00	RELEASED FOR PRODUCTION
2	06-JUN-2011	V02	PC8238: Change #5991 to #6405
3	02-DEC-2016	V02	PC8734: Add diodes D24 and D25 to 15V GG
4	D	V	N
5	D	V	N
6	D	V	N
7	D	V	N
8	D	V	N
9	D	V	N
10	D	V	N
11	D	V	N
12	D	V	N
13	D	V	N

M1404-V1.00				
MODEL(S):- AM Studio				
REF	FUNCTION	PART#	KNOB	{NEW}
P1	CH-1 GAIN	4418	8289	N
P2	BASS	4453	8289	N
P3	TREBLE	4453	8289	N
P4	NOTCH	4419	8289	N
P5	CH-2 GAIN	4418	8289	N
P6	DRY/WET	4417	8286	N
P7	MASTER	4480	8289	N
P8	TONE	4453	8289	N
P11FX	EFX-MODIFY	4417	8286	N
P12FX	EFX-SELECT	4523	8286	N
R	F	P	K	N
R	F	P	K	N


2N5401
2N5551
MPSA06
MPSA13
MPSA43
MPSA56
MPSA63




EBC
TO-92

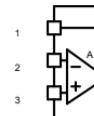


6840_PC

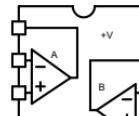



6882_PC

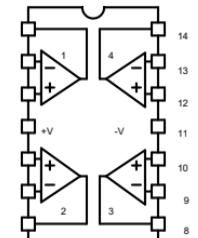

6804_PC

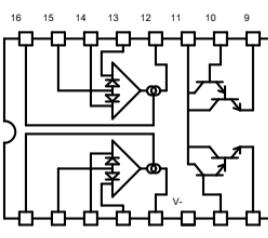

6745_PC

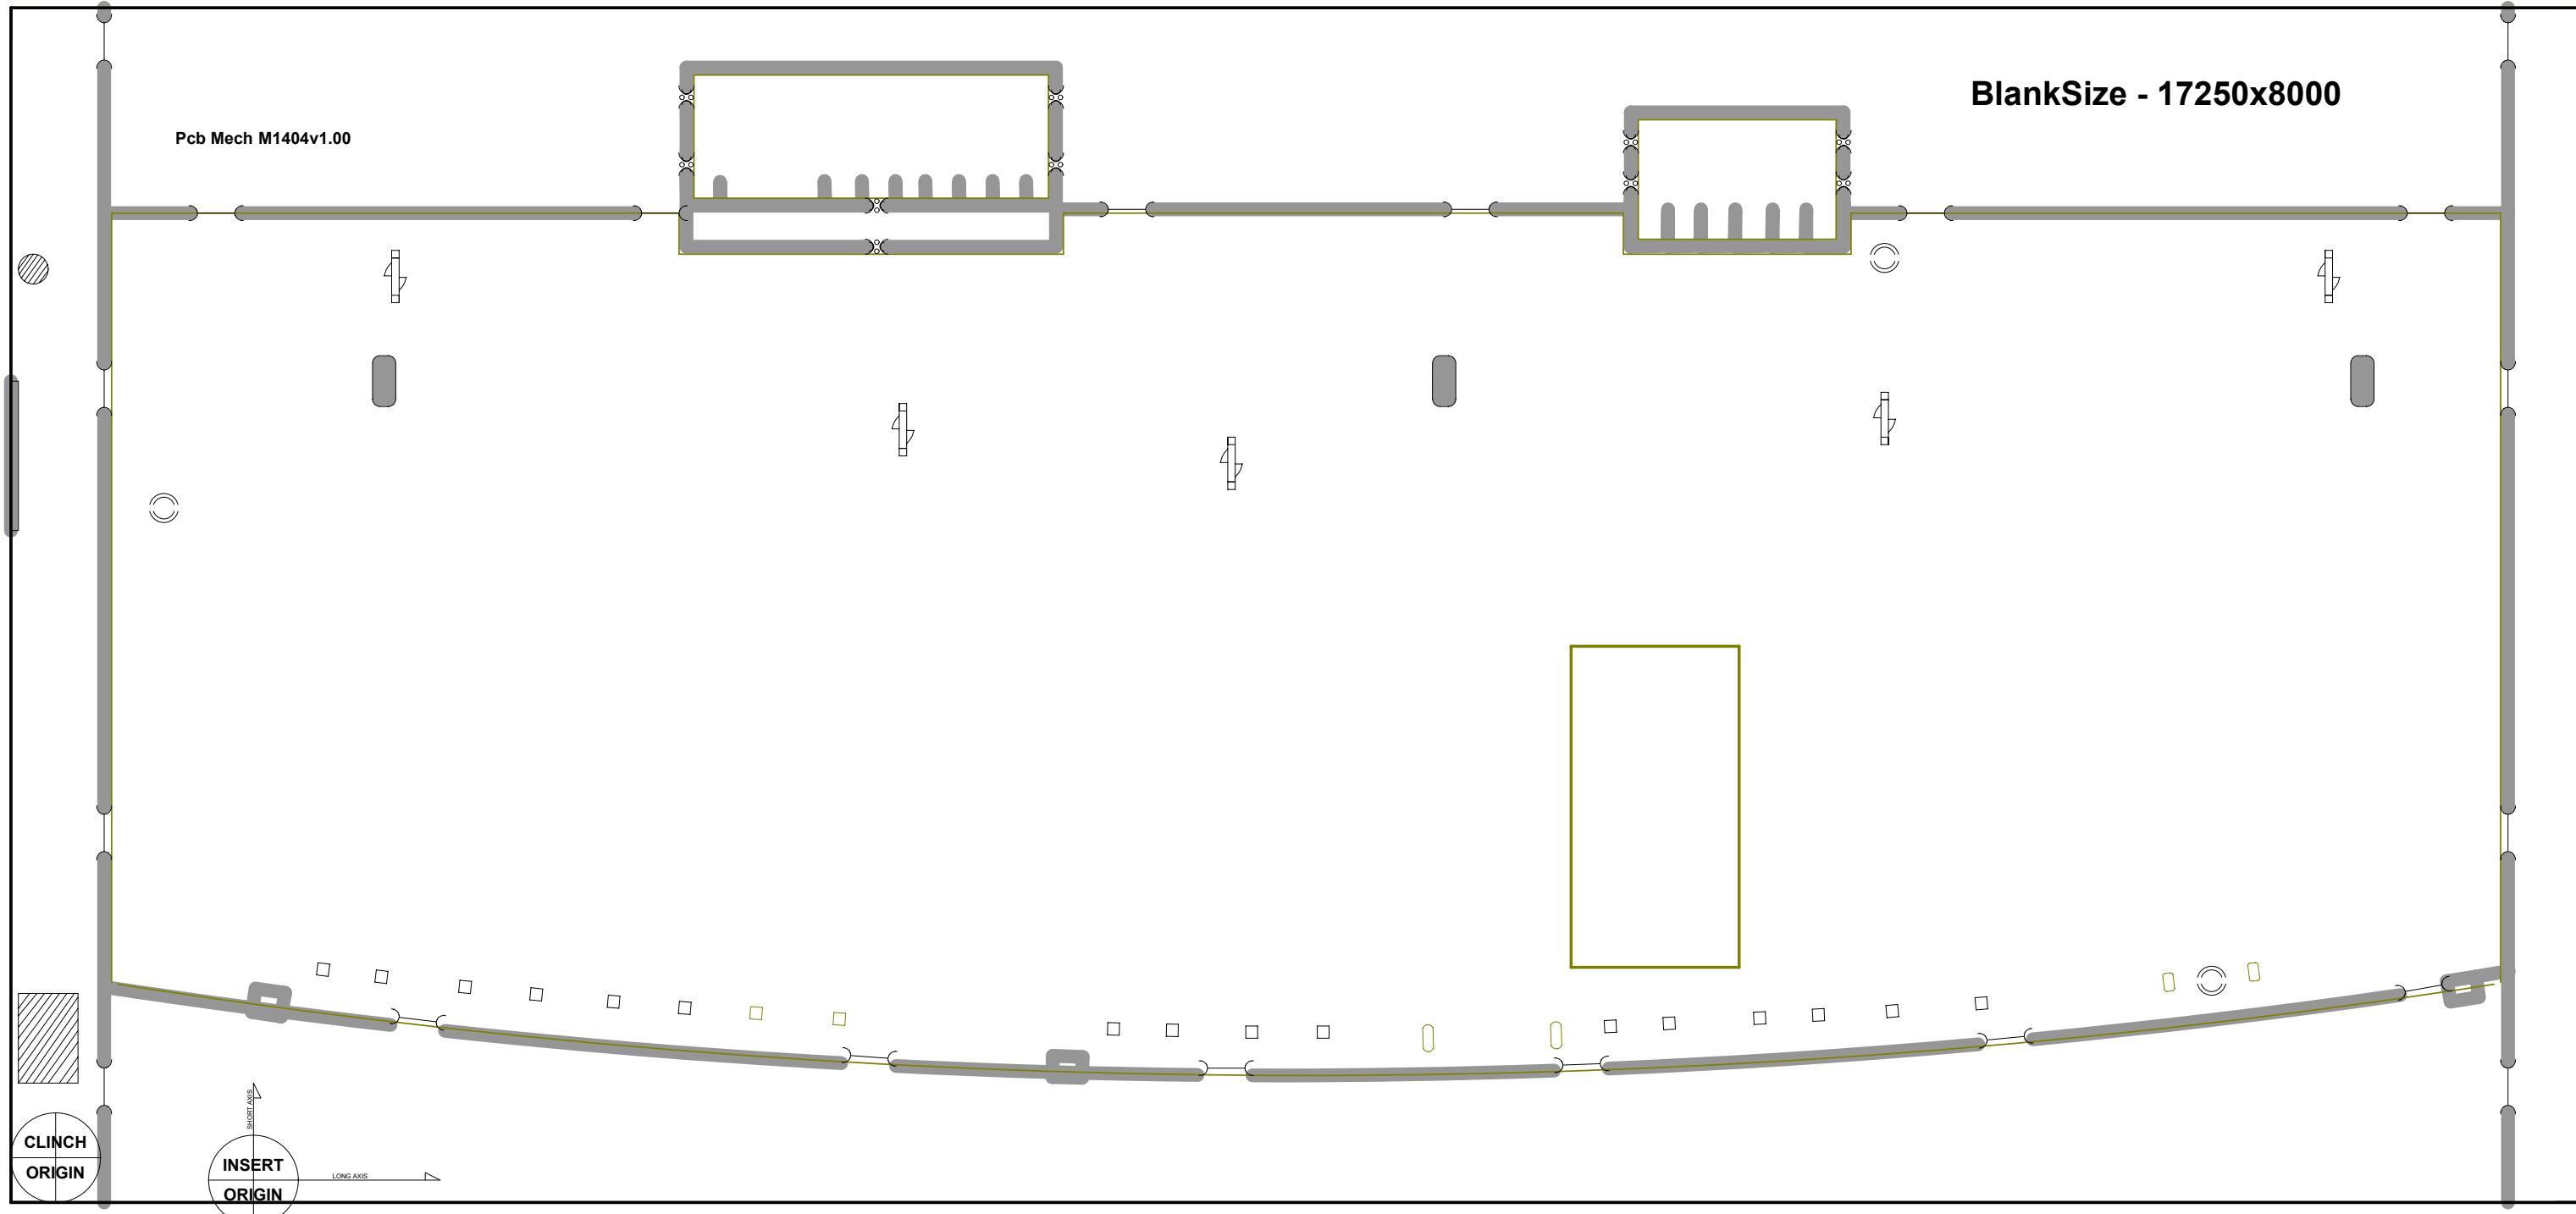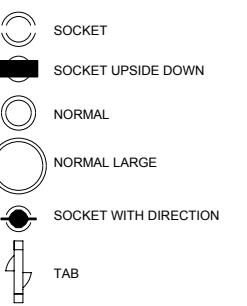



Yorkville Sound

550 Granite Court
Pickering, Ontario
Canada L1W 3Y8

Auto Attend: (905) 837-8550

Fax: (905) 837-8746

www.yorkville.com
